
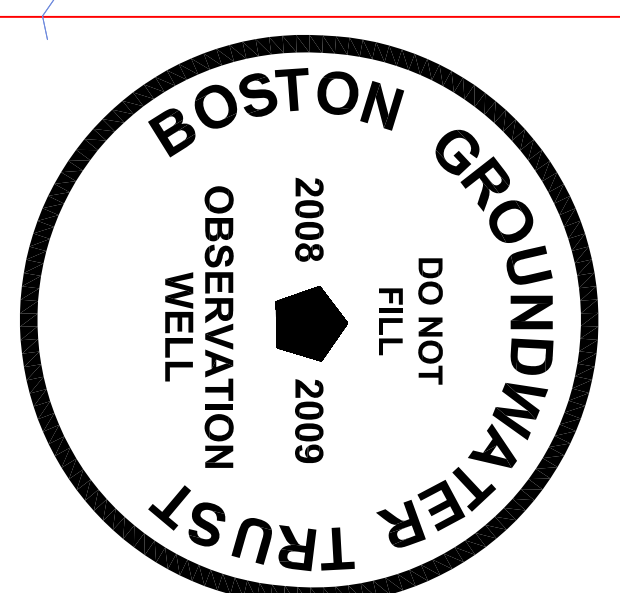


**Boston Groundwater Trust (BGWT):
Historical Well Location Plan:
Works Progress Administration
Groundwater Level Survey 1936-40**

22 Monitoring Wells

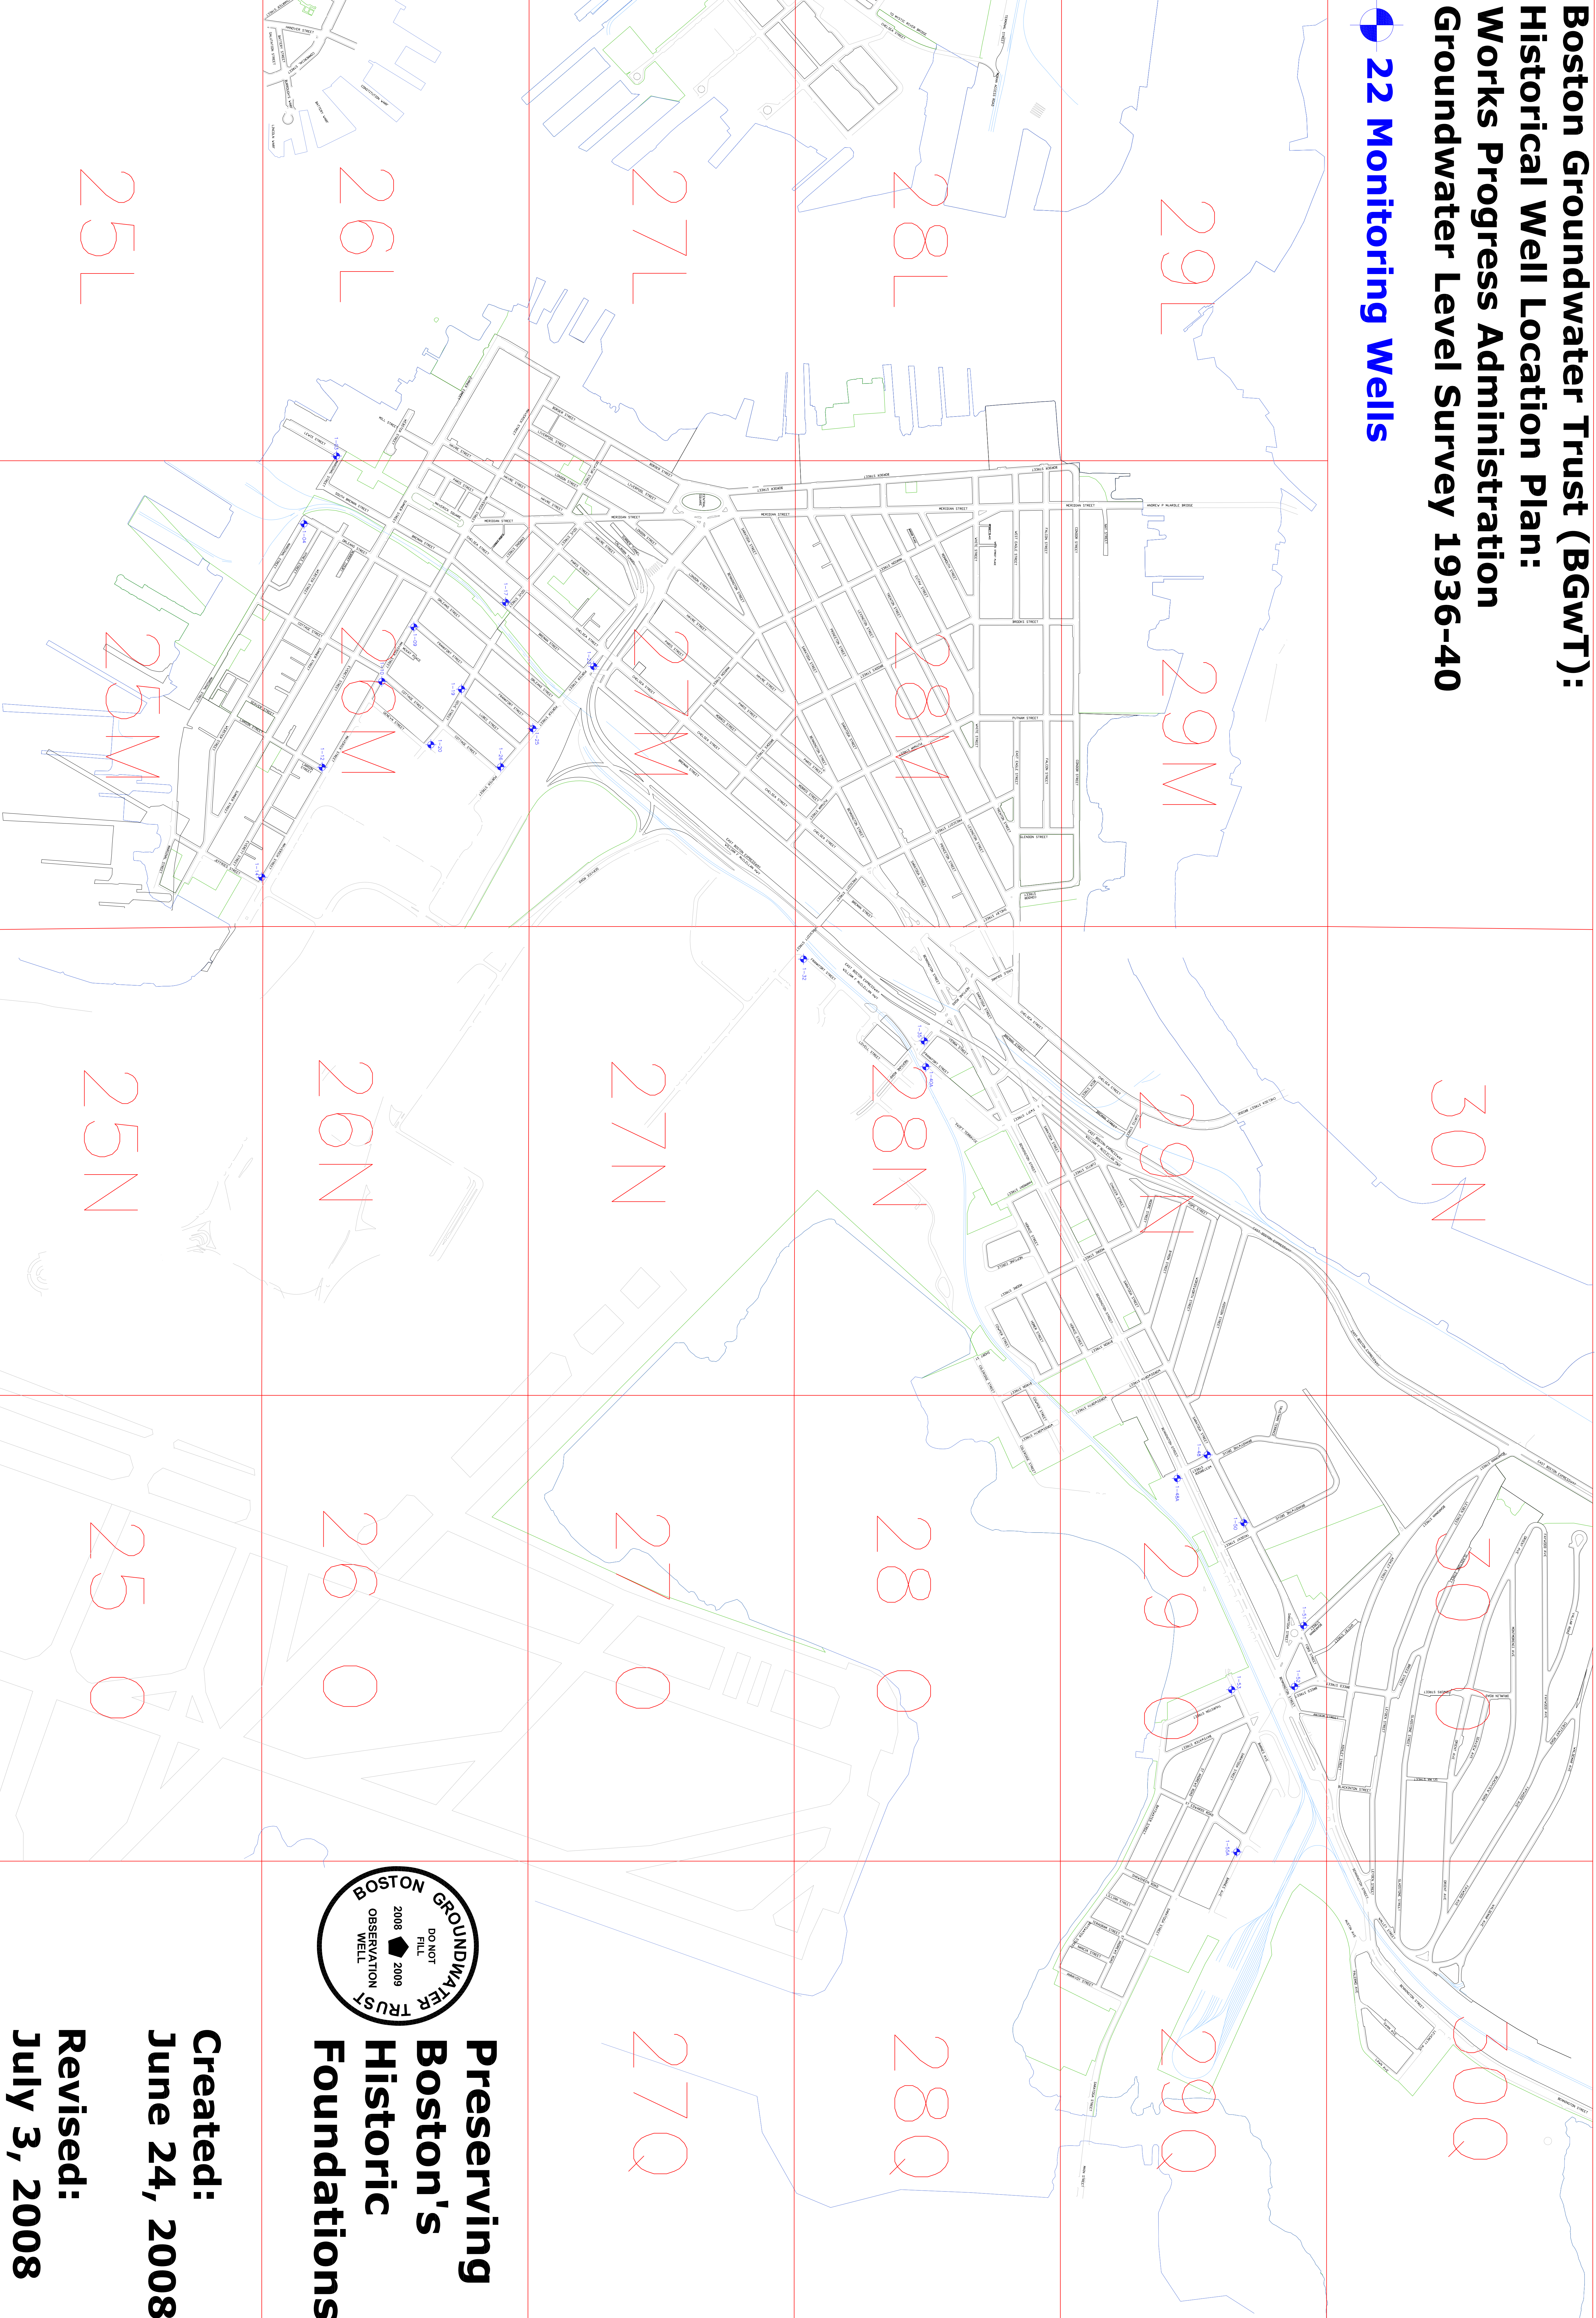

**Preserving
Boston's
Historic
Foundations**

**Created:
June 24, 2008**

**Revised:
July 3, 2008**